



URSATEC
WHEN PRESERVATIVE FREE MATTERS®

Packaging solutions for
advanced therapeutic compounds



Ursatec dosage systems for
preservative free dermal products

Innovative packaging solutions ...

The philosophy behind Ursatec Verpackung GmbH

Ursatec Verpackung GmbH is dedicated to support the global health care industry in avoiding preservatives in any kind of product. Health care administrations recommend the development of preservative-free products worldwide.


„The packaging should be designed to restrict the ingress of contaminants ...“

Cosmetics Europe: Guidelines on Microbial Quality Management, 1997

Dual microbiological protection

The COMFORT®-System is an airless dosage system for the delivery of preservative-free preparations. Microbiological safety is guaranteed by the distinctive construction of the unique COMFORT® pump and the special bag-in-bottle container. The inner bag gradually folds up as the negative pressure increases when more and more product is withdrawn.

- Safeguarded dosage system
- Aseptic filling process
- Oxygen protection

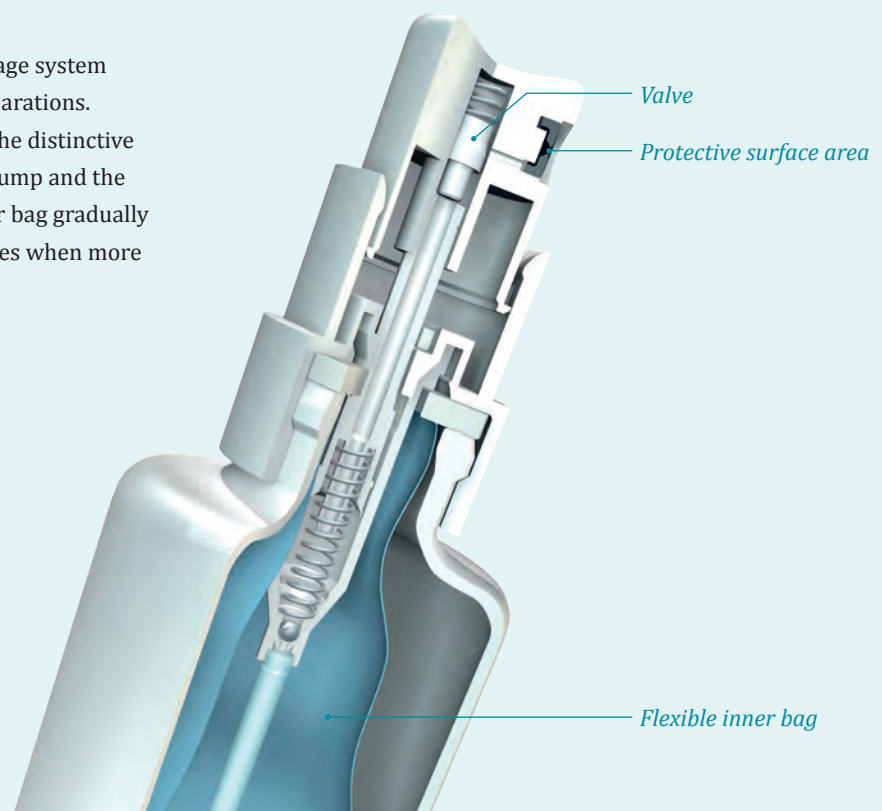

... for dermal application

For your demanding dermal product developments

The patented preservative-free Ursatec COMFORT®-System provides significant added value for advanced therapeutic compounds to the skin, buccal mucosa and ear. Depending on your specific requirements the COMFORT®-System allows the dispensation of a broad range of liquid preparations such as solutions, suspensions and lotions. Your product can be dispensed drop-wise, as a jet or as a spray and from any position (upright, upside down, horizontal).

As a response to the rising consumer demand for products that are free of harmful ingredients, the COMFORT®-System avoids the use of preservatives, which are suspected to cause allergic reactions and other side effects.

Benefits for your customers

Suitable for hydrophilic and lipophilic formulations such as solutions, suspensions and lotions.

- Preservative free
- 360° application
- Metered dose

Dosages and bottle sizes

Available dose sizes:

45 / 85 / 140 mg

Plastic bottle sizes:

15 / 30 / 50 ml



Ursatec Verpackung GmbH
Schillerstraße 4
D-66606 St. Wendel

Telefon: 0049 (0) 6851 - 80 26 0
Telefax: 0049 (0) 6851 - 80 26 14

E-Mail: info@ursatec.com
Internet: www.ursatec.com